

## Portable Sink – Startup



# WARNING



**If storing in temperatures below 33 degrees Fahrenheit; all water must be completely drained from the system or it will freeze and cause damage.**

**If water freezes any of the following parts can be damaged; heater, faucets, water lines and pump.**

**Turning the heater thermostat up before filling with water will cause damage.**

**Parts damaged by neglect or abuse are not covered under warranty.**

1. This unit ships as fully tested and inspected.
2. Determine the location where the sink will be located.
3. Unpackage the sink; lift the sink stand with two people when possible.
  - a. **\*DO NOT USE FAUCET OR KNOBS AS A HANDLE\***
4. Turn the water heater thermostat all the way to the left.
  - a. **\*DO NOT TURN UP THERMOSTAT HEATER WHEN EMPTY\***
5. Remove the pump intake line from the 6 gallon jug and fill with water and reinstall.
6. Attach faucet to the top of the sink cabinet.
7. Turn both hot and cold water faucet knobs all the way open (clockwise).
8. Plug sink cabinet GFCI adapter into a nearby outlet.
9. Water will start to flow out the faucet, shut off the cold water knobs only.
  - a. Now, wait while the air is purged from the hot water tank as it fills.
  - b. Once water starts to run from the faucet again, turn off the hot water knob.
10. If the hot water temperature is below 100 degrees Fahrenheit, increase the thermostat by turning the thermostat knob right slightly, wait 15 minutes and re-check temperature.
11. **DO NOT ADD MORE THAN 6 GALLONS OF WATER TO THE STAND AT ANY TIME.**
12. Always empty the waste jug before refilling the fresh water container.
13. When storing or not in operation, empty all water from the stand.
14. **STAND SHOULDN'T BE USED OR STORED IN FREEZING TEMPERATURES**