


# SINK KIT – ASSEMBLY GUIDE



**\* NOTE \*** During assembly, leave all the screws loose until the very end. This allows for flexibility and movement

Begin by assembling the base as shown, you can use a 4mm Allen wrench or a T25 bit.

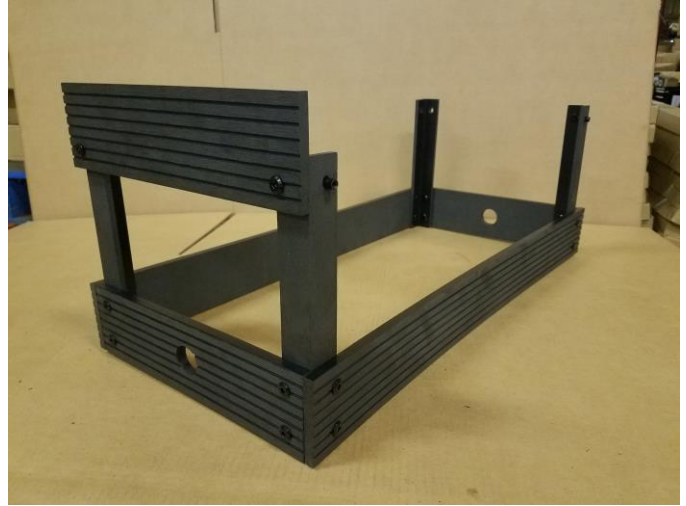

Next attach the remaining panels in a clockwise manner. The panels will attach above the corner brace edges, not flush.



Attach the (4) L brackets to the top rear panel, then attach the shelf to the (4) L brackets.





Align and square each corner of the frame and then fully tighten the screws.  
Dry fit the pans and adjust hose clamps as necessary to sit flush. Next install both of the faucets.




Remove the pans, and lay a thin bead of Silicone around the entire top edge of the sink pan frame.  
Reinsert the pans and align as desired, then place 20-30lbs of pressure across the top and allow the Silicone to fully cure.

Attach the provided Velcro to the metal bracket and trim the excess. Align the bracket to your desired location.  
Using the provided screws, mount the metal bracket to the faucet panel.



Remove the film from the Velcro backing, and attach to the provided splash guard (also with the film peeled back).

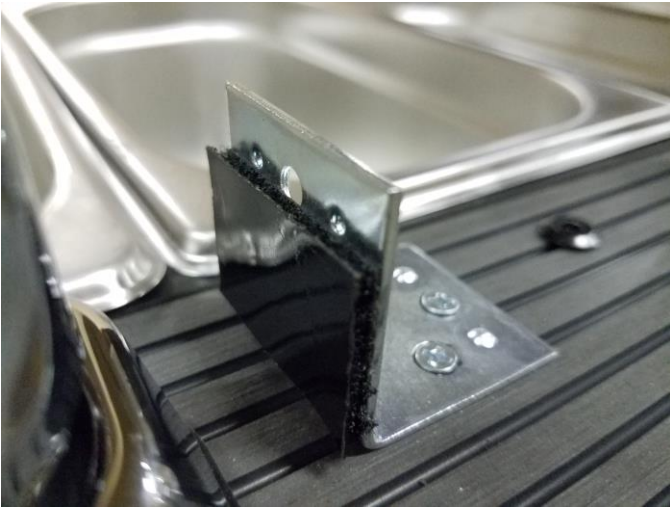

Your sink stand is now ready for use!

